


# Operating instructions

for the system user

# VIESSMANN

Heating system  
with control unit for constant temperature or weather-compensated  
mode

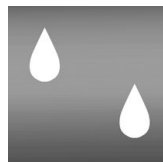

## VITODENS 100-W



# Safety instructions

## For your safety



Please follow these safety instructions closely to prevent accidents and material losses.

### Safety instructions explained



#### **Danger**

This symbol warns against the risk of injury.



#### **Please note**

This symbol warns against the risk of material losses and environmental pollution.

### **Note**

*Details identified by the word "Note" contain additional information.*

### **Target group**

These operating instructions are for the heating system user.

This unit is **not** designed to be used by persons (including children) with limited bodily, sensory or mental capacities, or lacking experience and/or lacking knowledge, unless they are supervised by a person responsible for their safety, or have received instructions from such a person as to how to use the unit.



#### **Please note**

Children should be supervised. Ensure that children do not play with the unit.



#### **Danger**

Incorrectly executed work on the heating system can lead to life-threatening accidents.

- Work on gas appliances must only be carried out by a registered gas fitter.
- Work on electrical equipment must only be carried out by a qualified electrician.

### **If you smell gas**



#### **Danger**

Escaping gas can lead to explosions which may result in serious injury.

- Do not smoke. Prevent naked flames and sparks. Never switch lights or electrical appliances ON or OFF.
- Close the gas shut-off valve.
- Open windows and doors.
- Remove all people from the danger zone.
- Notify your gas or electricity supplier and your heating contractor from outside the building.
- Shut off the electricity supply to the building from a safe place (outside the building).

**For your safety** (cont.)

**If you smell flue gas**



**Danger**

Flue gas can lead to life-threatening poisoning.

- Shut down the heating system.
- Ventilate the boiler room.
- Close all doors in the living space.

**In case of fire**



**Danger**

Fire creates the risk of burning and explosions.

- Shut down the heating system.
- Close the shut-off valves of the fuel lines.
- Use a tested fire extinguisher, class ABC.

**Boiler room requirements**



**Please note**

Incorrect ambient conditions can lead to damage to the heating system and put the safe operation at risk.

- Ensure ambient temperatures above 0 °C and below 35 °C.
- Prevent air contamination by halogenated hydrocarbons (e.g. as contained in paints, solvents or cleaning fluids) and excessive dust (e.g. through grinding/polishing work).
- Avoid continuously high humidity levels (e.g. through frequent drying of washing).
- Never close existing ventilation apertures.

**Ancillary components, spare and wearing parts**



**Please note**

Components that are not tested with the heating system may lead to damage to the heating system, or may affect their various functions.

Installation or replacement work must only be carried out by qualified personnel.

# Index

## Index

### Introductory information

Commissioning.....	5
Your system is preset at the factory.....	5

### Where to find the controls

Summary of controls and indicators.....	6
■ Opening the control unit.....	6
■ Control and display elements.....	6
■ Indicators on display.....	7
Operating mode of the heating system.....	7
■ Operation without room temperature control unit.....	7
■ Operation with room temperature control unit.....	7

### Start-up/shutdown

Starting the heating system.....	8
Shutting down the heating system.....	8
■ With frost protection monitoring for the boiler.....	8
■ Shutting down the heating system.....	9

### Settings

Heating.....	10
Domestic hot water.....	10

### Displays

Heating water temperature.....	11
--------------------------------	----

### What to do if...

System characteristics.....	12
Fault indicator on display.....	13

### Maintenance

Cleaning.....	14
Inspection and maintenance.....	14
■ .....	14

Energy saving tips.....	15
-------------------------	----

Keyword index.....	16
--------------------	----

## Commissioning

The commissioning and matching up of the control unit to local conditions and the structural characteristics of the building must be carried out by your heating contractor.

As the user of new combustion equipment, you may be obliged to notify your local flue gas inspector of the installation [check local regulations]. Local flue gas inspectors will also inform you [where appropriate] about work they may be required to perform on your combustion equipment (e.g. regular checks, cleaning).

### **GB** Gas-Council-No.

<b>Rated heating output range kW</b>	
6.5 - 21	41-819-30
6.5 - 25	41-819-31

## Your system is preset at the factory

The control unit is preset at the factory for standard operation.


Your heating system is therefore ready for operation. You may change the factory settings in accordance with individual requirements.

## Where to find the controls


### Summary of controls and indicators



#### Opening the control unit

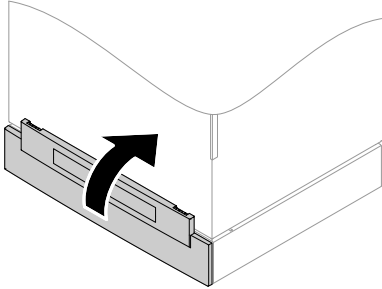The controls and display elements are behind the cover flap at the front.

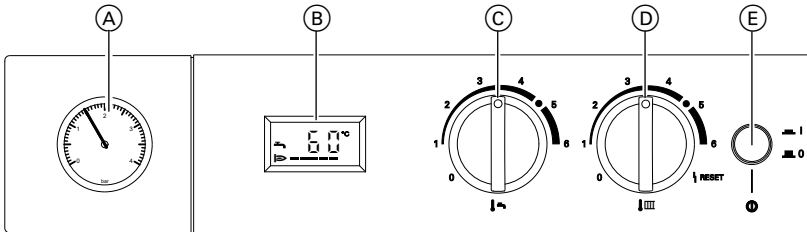


#### Control and display elements



- (A) Pressure gauge
- (B) Display
- (C)  Rotary selector "DHW temperature"
- (D)  Rotary selector "Heating water temperature" and "Reset"
- (E) ON/OFF switch

## Summary of controls and indicators (cont.)

### Indicators on display

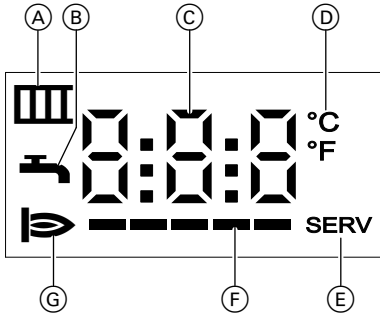

- (A) Heating mode
- (B) DHW heating
- (C) Display value or flashing fault code
- (D) Temperature in °C or °F (in conjunction with the display value)
- (E) Service setting active (only for contractors)
- (F) Current burner output
- (G) Burner in operation

## Operating mode of the heating system

### Operation without room temperature control unit

The required heating water temperature can be set with the rotary selector "↓ IIII" (see page 10).

### Operation with room temperature control unit

Please make any adjustments to the connected room temperature control unit using the relevant operating instructions.



#### Note

*The heating water temperature must be set sufficiently high using the rotary selector "↓ IIII" for the desired room temperature to be reached.*

## Start-up/shutdown

### Starting the heating system

We recommend you contact your local heating contractor if you are planning to start up a heating system that has not been used for a long period.

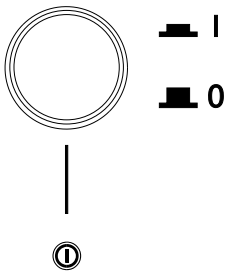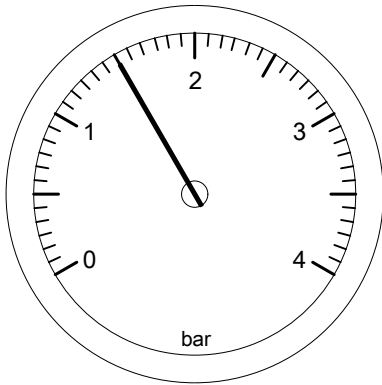

1. Check the pressure of your heating system on the pressure gauge.  
**Minimum system pressure 0.8 bar.**  
If the system pressure is too low, please notify your heating contractor.
2. **During open flue operation** (combustion air is removed from the installation room):  
Check that the ventilation openings of the installation room are open and unrestricted.
3. Open the gas shut-off valve.
4. Turn ON/OFF switch ON.  
Your heating system and room temperature control unit (if connected) are now ready for operation.


### Shutting down the heating system

#### With frost protection monitoring for the boiler

If you do not wish to use your boiler for several days you can switch the unit off.



## Shutting down the heating system (cont.)

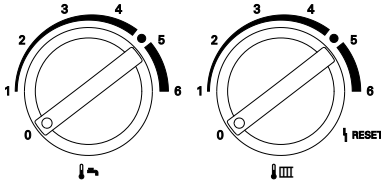

Turn both rotary selectors to "0".  
Frost protection is now active for the boiler.

### **Note**

*Frost protection for the entire heating system - see operating instructions for the room temperature control unit.*

## Shutting down the heating system

Shut down your heating system completely if it will not be needed for longer periods of time (several months).


We recommend you contact your local heating contractor if you are planning to take your heating system out of use for longer periods. Your heating contractor can then take any necessary action, subject to requirements, e.g. frost protection or preserving the heating surfaces.

1. Close the gas shut-off valve and safeguard against unauthorised reopening.
2. Switch ON/OFF switch OFF.  
The power to the system is now switched off.

**Note that the system is no longer frost-protected.**

## Settings

### Heating

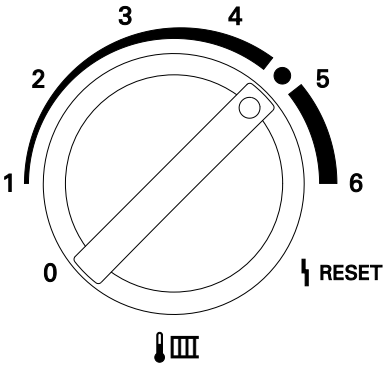

#### Switching ON:

Move rotary selector "🔥🌡️" to the required heating water temperature.

#### Note

*If a room temperature control unit is connected, use this unit to set the desired room temperature (see page 7).*


If central heating is active, the display shows "🌡️".

#### Switching OFF:

Turn rotary selector "🌡️🔥" to "0".

### Domestic hot water

Select the DHW temperature in accordance with your personal requirements (e.g. for showering).

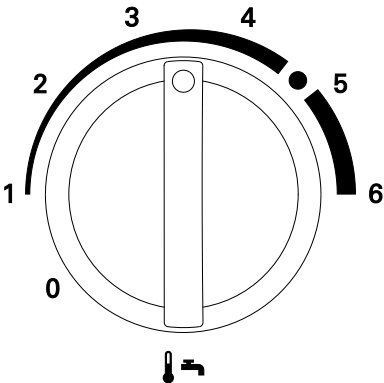

#### Switching ON:

Move rotary selector "🔥🚿" to the required DHW temperature.

If DHW heating is active, the display shows "🚿".


#### Switching OFF:

Turn rotary selector "🚿🔥" to "0".

#### Note

*If the boiler does not have a DHW cylinder connected or an integral instantaneous water heater, turn the rotary selector "🚿🔥" to "0".*

## Heating water temperature

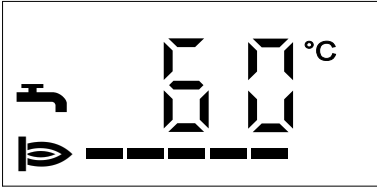

The boiler water temperature appears on the display at all times during operation.

## What to do if...


### System characteristics

What to do if...?	Cause	Remedy
... The heating system will not operate	No mains voltage	Switch the ON/OFF switch ON
	Rotary selector "🔥🔥🔥" is on "0"	Setting the desired heating water temperature (see page 10)
	Fuse/MCB in the power distribution board (domestic mains fuse) or in control unit has blown/responded	Notify your local heating contractor
... Burner is not started or starts irregularly	No gas available	Open the gas shut-off valve and if necessary check with your gas supply utility
	Control unit fault	Check the fault code on the display. Contact your local heating contractor with the fault code
... The burner will not start and a flashing fault code appears on the display	False start	Reset burner fault (see page 13) – if this attempt to start also fails, notify your heating contractor
	Low water	Notify your local heating contractor
... Burner is switched off even though rooms are not yet at the desired temperature	Fault in the ventilation air supply or flue system	Notify your local heating contractor
	Heating water temperature or required room temperature are set too low	Raise the heating water temperature with rotary selector "🔥🔥🔥" (see page 10) or raise required room temperature (see room temperature control unit operating instructions)
	Air in the heating system	Bleed radiators
... Rooms are not at the required temperature, even though burner is operating	DHW priority	Stop drawing off hot water or wait until DHW cylinder has heated up
	Circulation pump faulty	Notify your local heating contractor

**System characteristics** (cont.)


What to do if...?	Cause	Remedy
... DHW temperature is too low	DHW temperature is set too low or rotary selector "🔥" is on "0"	Set the desired DHW temperature
... For boilers <b>without</b> a DHW cylinder connected, fault code "58" flashes on the display	Rotary selector "🔥" is not on "0"	Set rotary selector "🔥" to "0"

**Reset burner fault (Reset)**

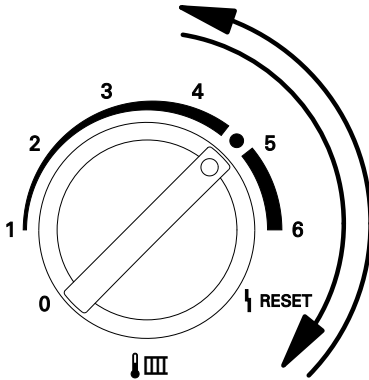

Turn rotary selector "🔥" to position "🔥 RESET" for less than 2 s and then back to the control range.

**Fault indicator on display**

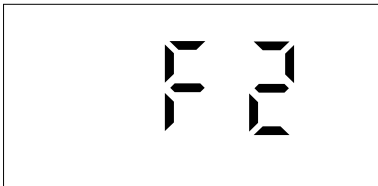

You can check the fault code on the display and then notify your heating contractor accordingly. This allows the heating contractor to better prepare for the service call and may save additional travelling costs.

Any fault in your heating system will flash on the display.

## Maintenance

### Cleaning

All appliances may be cleaned with a commercially available domestic cleaning agent (non-scouring).

### Inspection and maintenance

The inspection and maintenance of a heating system is prescribed by the Energy Savings Ordinance [EnEV - Germany] and the DIN 4755, DIN 1988-8 and EN 806 standards.

Regular maintenance ensures trouble-free, energy-efficient and environmentally responsible heating. For this, we strongly advise you to arrange an inspection and maintenance contract with your local heating contractor.

#### Boiler

Increasing boiler contamination raises the flue gas temperature and thereby increases energy losses. All boilers should therefore be cleaned annually.

#### Logbook

Please ensure that you have a Logbook supplied with your appliance. This Logbook should be completed by your installer to verify that the correct installation and commissioning procedure was followed.

Failure to complete the Logbook may result in difficulties should a problem arise with your appliance during the guarantee period. This Logbook forms part of the industry's Benchmark code of practice for the installation, commissioning and servicing of central heating systems.


All CORGI Registered Installers carry a CORGI ID card and have a registration number. Both should be recorded in your Logbook. You can check your installer is CORGI registered by calling CORGI on 0870 401 2230.

#### Drinking water filter (if installed)

For hygiene reasons

- renew filter insert on non-backwashing filters every 6 months (visual inspection every 2 months)
- on backwashing filters, backwash every 2 months.

## Energy saving tips

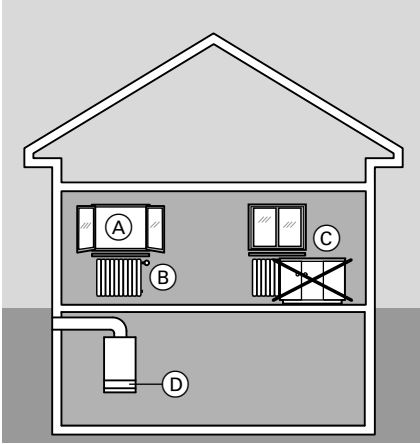

You can also save energy by taking the following steps:

- **Correct ventilation.**  
Briefly open window (A) fully and at the same time close the thermostatic valves (B).
- **Never overheat rooms;**  
endeavour to achieve a room temperature of 20 °C; you can save up to 6% on your heating bills for every degree you reduce your room temperature.
- **Close roller shutters (where installed)** at dusk.
- **Adjust thermostatic valves (B)** correctly.
- **Never cover radiators (C)** and thermostatic valves (B).
- **Utilise the setting options offered by control unit (D).**
- **Only activate the DHW circulation pump if DHW is being drawn.**
- **Controlled DHW consumption:** A shower generally uses less energy than a full bath.

# Keyword index

## Keyword index

### C

Changing the temperature.....	7, 10
Cleaning information.....	14
Commissioning.....	5
Controls.....	6

### D

DHW temperature.....	10
Display.....	7
Display elements.....	6
Drinking water filter.....	14

### E

Error (fault).....	13
--------------------	----

### F

Fault.....	12
Frost protection.....	8

### H

Heating water temperature.....	10
--------------------------------	----

### I

Inspection.....	14
-----------------	----

### M

Maintenance.....	14
Maintenance contract.....	14

### N

Notice of completion.....	5
---------------------------	---

### O

Open control unit.....	6
------------------------	---

### R

Reset.....	13
Room temperature.....	7

### S

Starting.....	8
---------------	---

### T

Temperature display.....	11
--------------------------	----

## Your contact

Contact your local contractor if you have any questions regarding the maintenance and repair of your system. You may, for example, find local contractors on the internet under [www.viessmann.com](http://www.viessmann.com).

Viessmann Werke GmbH&Co KG  
D-35107 Allendorf  
Telephone: +49 6452 70-0  
Fax: +49 6452 70-2780  
[www.viessmann.com](http://www.viessmann.com)

Viessmann Limited  
Hortonwood 30, Telford  
Shropshire, TF1 7YP, GB  
Telephone: +44 1952 675000  
Fax: +44 1952 675040  
E-mail: [info-uk@viessmann.com](mailto:info-uk@viessmann.com)

5608 698 GB Subject to technical modifications.

Printed on environmentally friendly,  
chlorine-free bleached paper

